


ZG01 CO2 Monitor Module

User Manual

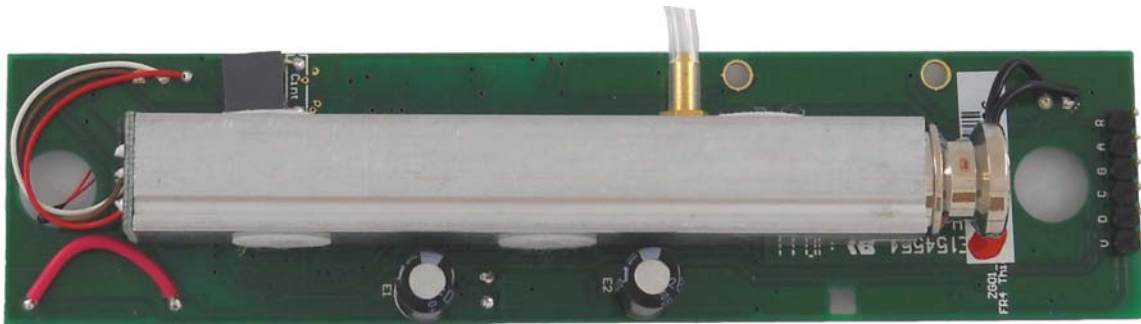

Contents

1 GENERAL DESCRIPTION	3
EDITION 01/12/2011	3
2 FEATURES OF DESIGN	3
3 SPECIFICATION.....	4
PIN ASSIGNMENT OF ZG01	5
4 SERIAL OUTPUT.....	6
4.1 TYPICAL DIAGRAM	6
4.2 TIMING OF SPI	7
4.2.1 <i>Format of Message</i>	8
5 INTERFACE DEMO BOARD: ZGHUB	9
6 ZGVIEW: INTERFACE PROGRAM FOR PC	10

1 General Description

This document describes the user guide of ZG0 Series (ZG01).

Edition 01/12/2011

Copyright:

All right reserved. Reproduction in any manner, in whole or in part is straightly prohibited without written permission of ZyAura.com. This information contained in this document is subject to change without notice.

Limited Warranty:

This data sheet contains information specific to products manufactured at the time of its publication, Contents herein do not constitute a warranty.

Trademark Acknowledgements:

All trademarks are the property of their respective owners.

2 Features of Design

ZyAura, a world class leader and supplier of IR sensor technology and temperature measurement devices, is pleased to introduce a new CO2 monitor for use in scientific, commercial, and consumer applications. The ZG01 is a new and low-cost carbon dioxide monitor implementing IR-SoC technology; it can accurately detect carbon dioxide levels between 0 to 3000 ppm. This gas monitor is suitably fit for applications in Indoor Air Quality (IAQ), HVAC, safety, and other industries.

3 Specification

Measurement Method	NDIR
Sample Method	Diffusion or flow through (0.05~0.2l/min)
Measurement Range	0~3000ppm/0.3%
Operating TempRange	32 to 122° F (0-50°C) 0-95% RH,non-condensing
Storage Range	-20~60C,95%RH
■Accuracy	
CO2 Accuracy	+/-50ppm or 5% of reading
Ambient Temperature Accuracy	+/-1.0°C
Calibration Interval	12 months, offset adjustment using single gas at 0-1000 ppm CO2 under UcaliMode.
Pressure Dependence	0.13% of reading per mm Hg
Repeatability	20ppm
Resolution	1ppm
■Outputs	
Output Interface	6pin Vertical Connector, Space=2.54mm
Digital Output	CO2 & Tamb in ZyAura Protocol
OC (Open Collector)Output	Fixed setpoint, factory set at 1000 ppm, 50 ppm hysteresis
■Power Supply	
AC/DC Supply	5V-9VDC
■Warm Up & Response	
Response Time #R1 (63% Rise Time)	<2min
Warm Up Time(CO2)	<60 sec
Update Period	7 sec
Warm Up Time(Ambient Temp)	20~30min
Dimension	118x28x20mm (4.65x1.10x0.79 inch)
Weight	49g (1.73 oz)without attachment

Pin Assignment of ZG01

Warning: The Dimension in this drawing is for reference only.

V: Vdd

G: GND

D: Data (Serial Data)

C: Clock (Serial Clock)

OC: Open Collector

R: Reset

ZG01 Module External Drawing

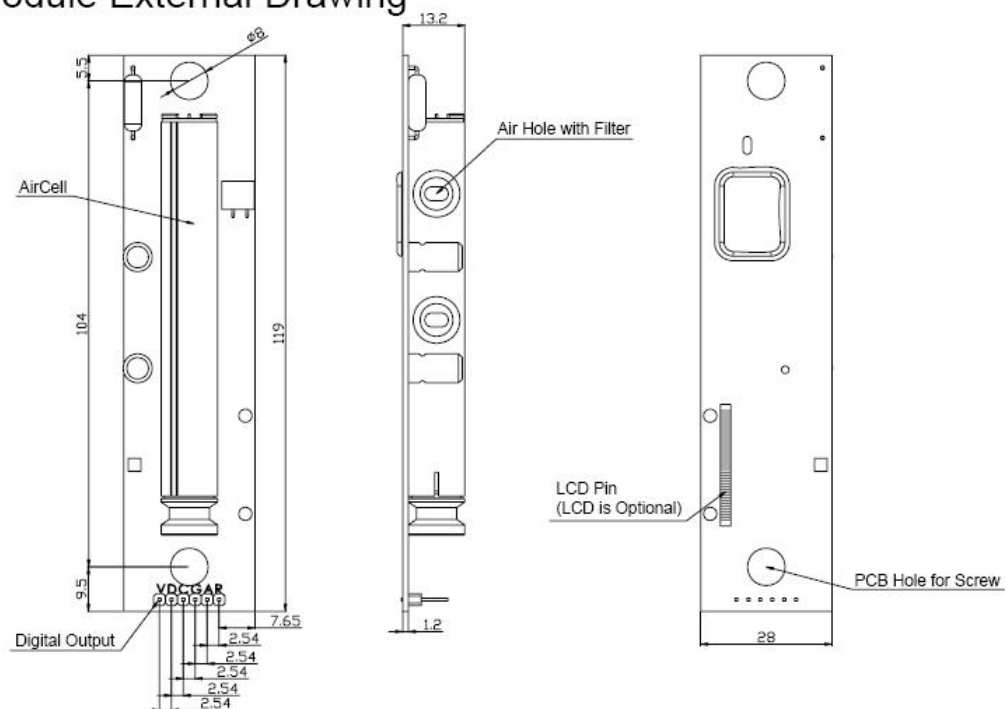


Fig1. The Module External Drawing

4 Serial Output

4.1 Typical Diagram

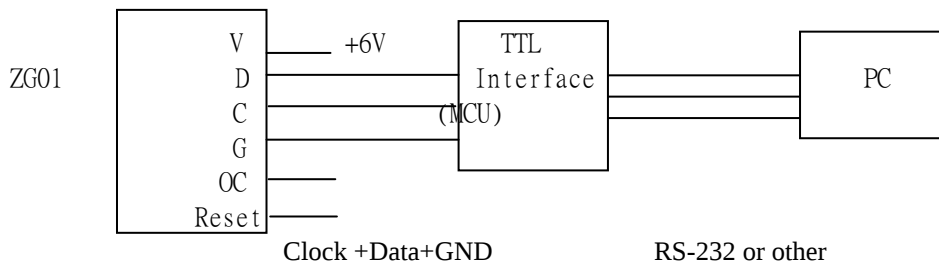


Fig2. Typical Diagram

ZG01 to TTL Interface (MCU)

V:Vcc

D:Data

C:Clock (2KHz)

G:GND

OC: Open Collector

Reset: Restart the device

Note: Data Pin is High when there is no data out, Time Out > 2ms

4.2 Timing of SPI

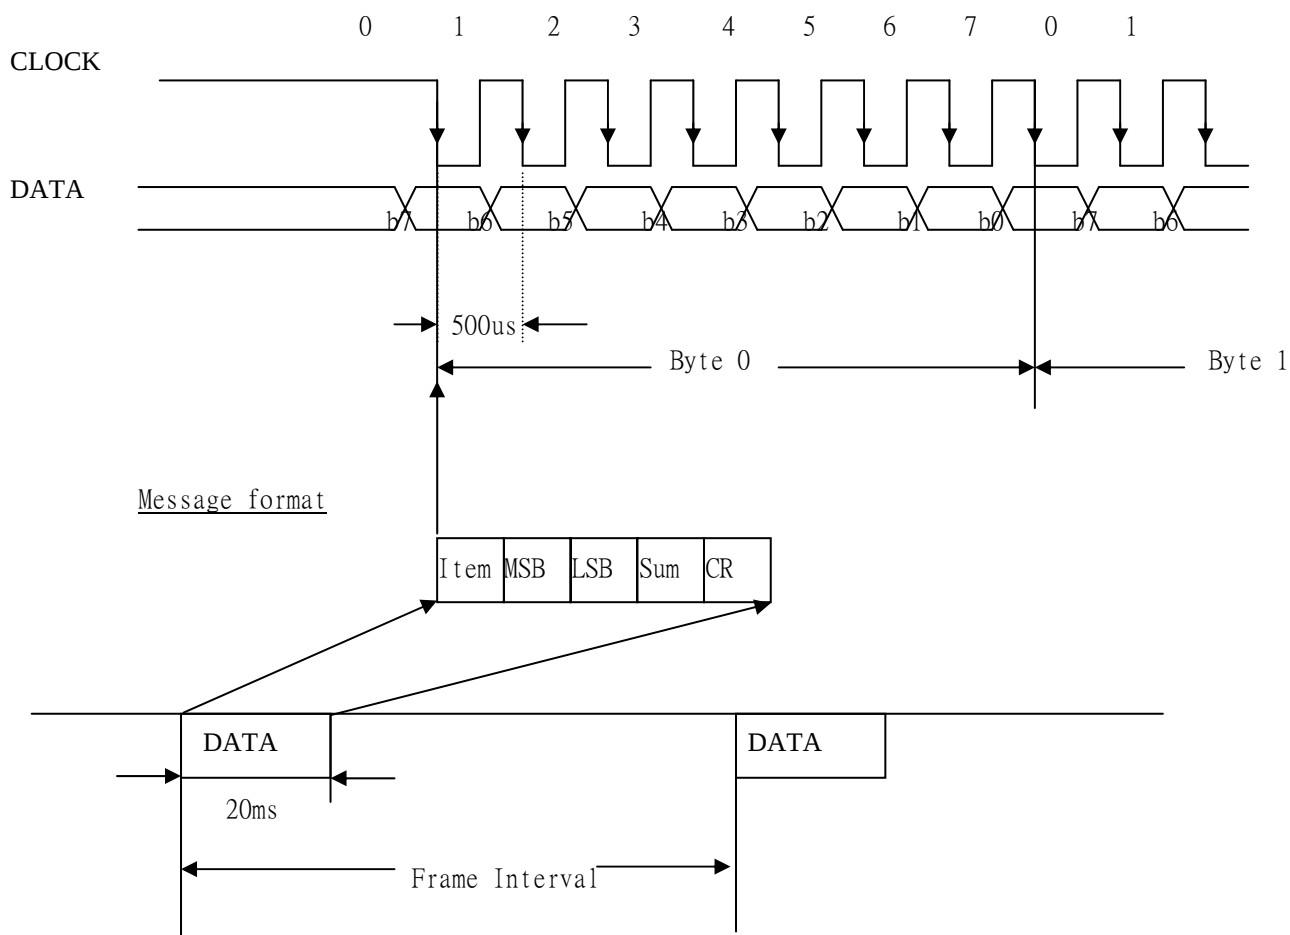


Fig3. Timing of SPI

4.2.1 Format of Message

Item	MSB	LSB	Sum	CR
------	-----	-----	-----	----

Item “B” (42h): Tobj (Temperature of Obj)
MSB 8 bit Data Msb
LSB 8 bit Data Lsb
Sum Item+MSB+LSB=SUM
CR 0Dh, End of the message

Co2 Output:

50	02	58	AA	0D
----	----	----	----	----

Item 50h→ “P” the item code of CO2 concentration
Data MSB 02h
 LSB 58h
 Real CO2 concentration 600ppm
Sum CheckSum 50h+02h+58h=AAH (**Only Low Byte**)
 HexToDec (0258H)=600
CR 0Dh → ‘Carriage Return’ means End of Message

Temp Output:

42	12	82	D6	0D
----	----	----	----	----

Item 50h→ “B” the item code of Temp concentration
Data MSB 12h
 LSB 82h
 Real Temp value is 23°C
 HexToDec (1282H) =4738; 4738/16-273.15=23
Sum CheckSum 42h+12h+82h=D6H (**Only Low Byte**)
CR 0Dh → ‘Carriage Return’ means End of Message

5 Interface Demo Board: ZGhub

General Description:

ZGhub is an Interface box with LCD, for ZG0mseries.

This Box can work as an interface between the CO2 monitor module and PC. See Fig.5

“ZGhub” has a 2-column character type LCD Display, it can also work without the PC.

The Hub will show CO2 & Tamb (data from the ZG0m) continuously.

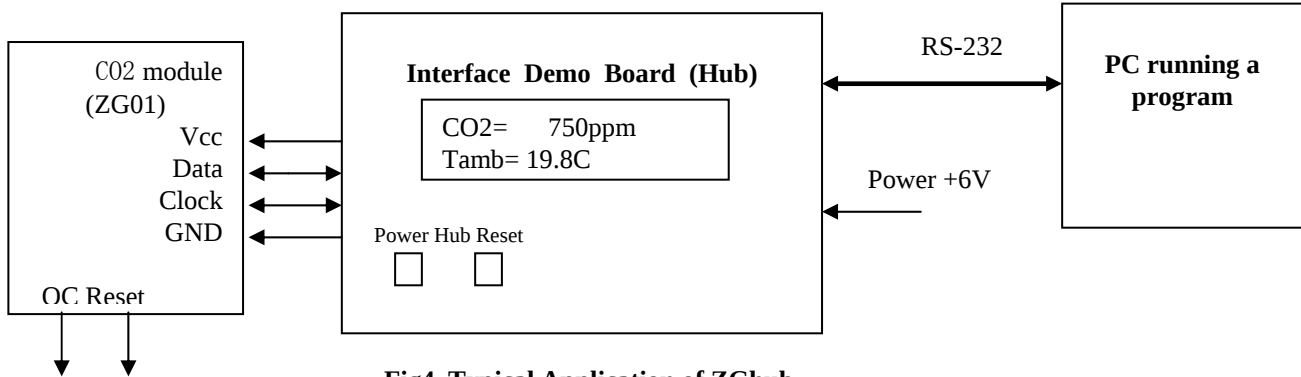


Fig4. Typical Application of ZGhub

Model No:ZGhub



Fig5.ZGhub

6 ZGview: Interface Program for PC

Program: ZGview

A Free version for demonstration can be downloading at <http://www.zyaura.com/support/default.asp>

- Running under Window operating system
- Must be used accompanied with ZGhub
- This program will show the curve of :
CO2 (ppm); Tamb (degC) continuously
- Modification of the setting ,such as Alarm Level

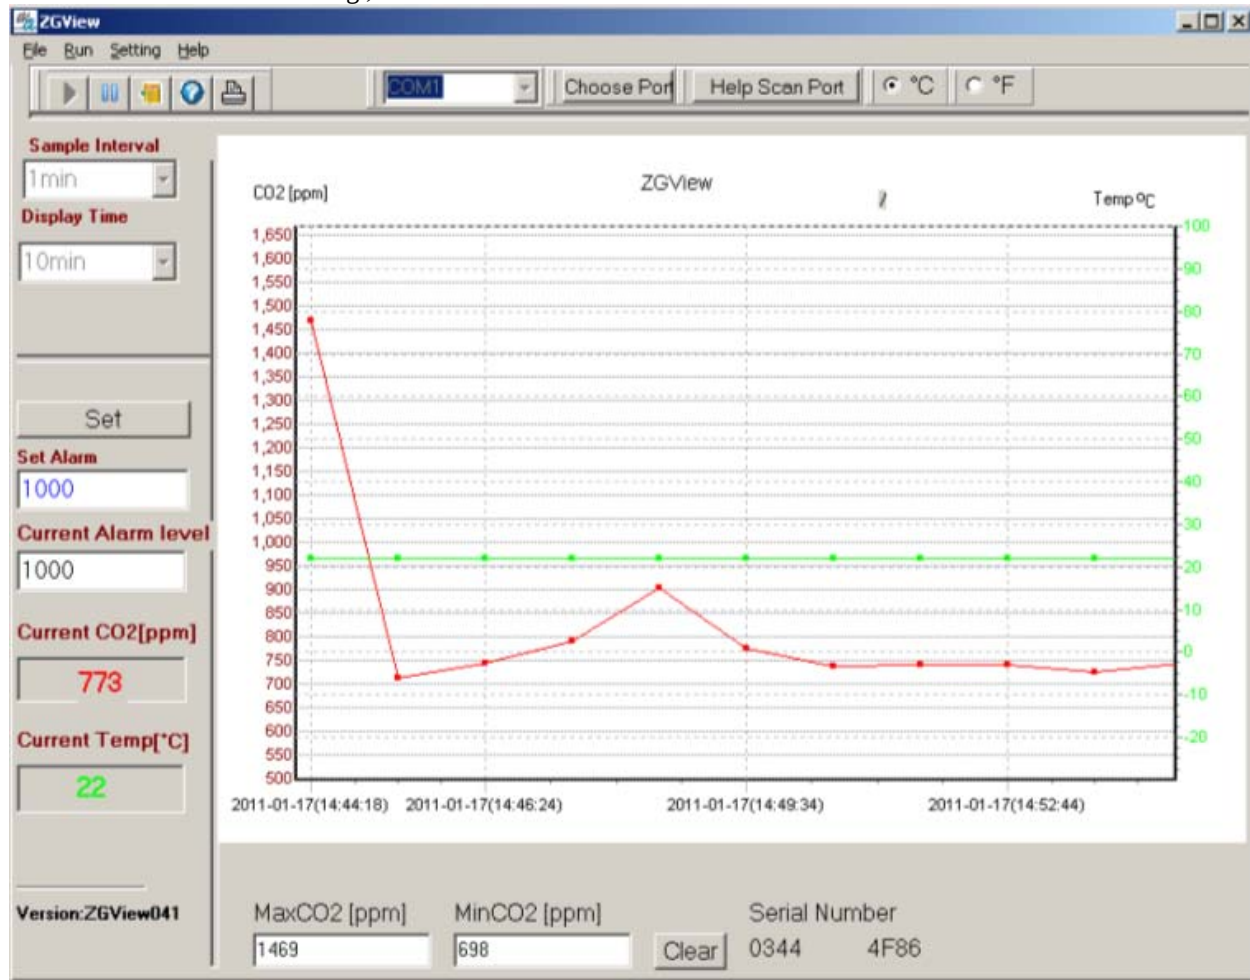


Fig6.ZGview Window